



Human Vibration Configuration Guide (HVM200)

Hand -Arm Vibration


ADP084A
Adapter kit




ADP080A
Hand Adapter



ADP081A
Handle Adapter




ADP082A
Clamp Adapter




ADP063
Palm Adapter

SEN040F (Impulsive machines)
0.1 mV/(m/s²) triaxial Accelerometer




OR

SEN041F (Rotating machines)
1 mV/(m/s²) triaxial Accelerometer




5-40 Female mount thread

SEN026
1 mV/(m/s²) triaxial Accelerometer



CBL216
4-pin mini to 4-pin ¼-28




Whole Body Vibration

SEN027
Triaxial Seat Pad Sensor




General Vibration


SEN020
0.1 mV/(m/s²) triaxial Accelerometer



CBL217-05
4-pin, ¼-28 to 4-pin ¼-28
10-32 female mount



 
HVM200 Human Vibration Meter

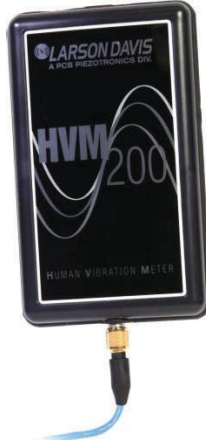


Included Accessories

PSA035
Power supply




Universal USB Power supply


Adapter kit




CBL218
USB cable



CBL217-01 (30 cm)
4-pin (¼-28) to 4-pin (¼-28)



8 GB data memory



Optional Accessories

CCS047
Hard Shell Case



CCS048-L or -S
Arm Band



34C06
Hand held Shaker
9.7 m/s² @ 159.2 Hz



SWW-G4-HVM
G4 license for
HVM200 & HVM100



Human Vibration Configuration Guide (HVM200)

HVM200 Bundled Systems

HVM200-HA-40F or HVM200-HA-41F
Hand-arm vibration kit

HVM200
Human Vibration Meter



CCS047
Hard Shell Case




CS048-L
Large Arm Band

SWW-G4-HVM
G4 license for
HVM200 & HVM100



 ADP081A
Handle Adapter



SEN040F (Impulsive machines)
0.1 mV/(m/s²) triaxial Accelerometer



SEN041F (Rotating machines)
1 mV/(m/s²) triaxial Accelerometer



OR

HVM200-WB
Whole body vibration kit

SEN027
Triaxial Seat Pad Sensor



HVM200
Human Vibration Meter



CCS047
Hard Shell Case



SWW-G4-HVM
G4 license for
HVM200 & HVM100



HVM200-ALL-40F or HVM200-ALL-41F
Hand-arm & whole body vibration kit

CCS047
Hard Shell Case



CCS048-L
Large Arm Band




HVM200
Human Vibration Meter




SWW-G4-HVM
G4 license for
HVM200 & HVM100



 ADP081A
Handle Adapter



SEN027
Triaxial Seat Pad Sensor

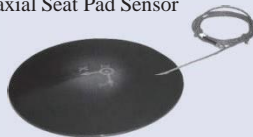 

SEN040F (Impulsive machines)
0.1 mV/(m/s²) triaxial Accelerometer



SEN041F (Rotating machines)
1 mV/(m/s²) triaxial Accelerometer



OR

Selection & Configuration Guide

Acoustic Calibrator Selection Guide

	Calibrators		Microphone Adapters			
	Class 1	Class 2	½ inch	3/8 inch	¼ inch	1/8 inch
½ inch opening	CAL200 	CAL150 	Standard	ADP031  Included with CAL150	ADP109 	ADP075 
	CAL250 			ADP019  Included with CAL250	ADP020 	ADP114 
1 inch opening						

Preamplifier Adapter Selection Guide

	1 inch microphone	½ inch microphone	¼ inch microphone
¼ inch preamplifier		ADP009 	Standard
½ inch preamplifier	ADP008A 	Standard	ADP043 
Microphone Simulator	ADP006 (47 pF) 	ADP005 (18 pF) 	ADP002 (6.8 pF) 

GMGA MEASURING

Address: No. 33 Alley 99/120 Dinh Cong Ha, Dinh Cong Ward, Hoang Mai District, 10000 Hanoi City, Vietnam

Telephone: [+84 845 969 336](tel:+84845969336)

Email: info@gmga.vn

Website: <https://gmga.vn/>

